

INSTRUCTIONS



1. INSERT TWO “AAA” BATTERIES INTO THE BATTERY COMPARTMENT UNDER THE BUTTON.
2. SLIDE THE SWITCH TO THE “REC” POSITION.
3. PRESS AND HOLD THE BUTTON; WHILE HOLDING, RECORD A MESSAGE (UP TO 30 SECONDS).
 4. WHEN FINISHED RECORDING, SLIDE THE SWITCH TO THE “PLAY” POSITION.
 5. THE BUTTON WILL NOW PLAY YOUR MESSAGE WHEN PRESSED.
6. REPEAT THE ABOVE STEPS TO RECORD A NEW MESSAGE OVER THE OLD MESSAGE.

THANK YOU!

IT WOULD MEAN A LOT TO US IF YOU WOULD
LEAVE US A 5-STAR REVIEW ON AMAZON!



WE WANT YOU TO BE COMPLETELY SATISFIED!
IF YOU HAVE ANY QUESTIONS, PLEASE CALL
US AT (208) 557-3352 OR EMAIL
SUPPORT@INVENTIVPRODUCTS.COM!

**SAVE 10% ON ANY INVENTIV
PRODUCT ON AMAZON.COM**

ENTER CODE AT CHECKOUT

INVENTIV10